

说明书
折好纸后尺寸：55*78mm
材质：双铜纸 白底印黑字

DRA-3540

3W MINI Wireless Speaker

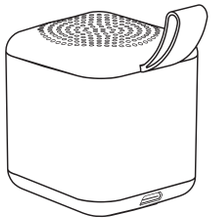

User manual



① Micro USB Connector
② On / off button
③ Silicone Pad
④ Hanging Strap

CONNECTION WITH MOBILE PHONE

Press and hold the Button ' ⏻ ' for 3 seconds to go into pairing mode. The blue LED light flashes when pairing and you will hear a tone.

TWS (True Wireless Stereo) Mode

1.Turn on the 1st & 2nd speaker individually. Double or Three times press the button ' ⏻ ' of one speaker to go into TWS paring mode. One speaker will light up, another speaker will flash and you will hear a tone when the two speakers are connected. Once paired, The two speakers will automatically connect when you turn on them next time.

2. Turn on your mobile phone and Bluetooth.

3. Search for the Bluetooth device in your mobile phone and select ' DRA-3540' and connection is successful. The blue LED light will light up when pairing and you will hear a tone. Press the button ' ⏻ ' to play/pause.

4. Press and hold ' ⏻ ' for 3 seconds to turn off the speaker and you will hear a tone.

CHARGING YOUR SPEAKER

1. Connect the Micro-USB charging cable to the DC5V input of the speaker, and plug the USB connector of the charging cable to DC5V USB power supply. When charging, The LED indicator next to the charge port will turn red.

2. When the speaker is fully charged the red LED will turn off.

Specifications:

Model Number:	DRA-3540
Version:	4.2
Operating Distance:	≤10m
Frequency Response:	20Hz-20KHz
Play time:	3-5H
Charging Time:	1.5-2H
Battery:	400mAh/3.7V
Speaker Output:	3W
Signal-To-Noise:	≥75dB
Distortion:	≤1.0%
Dimension:	41x41x46 mm

Note: about the speaker's using environment:

1,Bluetooth connection and transmission may be affected by the surrounding environment like trees, metal and some other materials, for they can absorb or block the signal, so the distance of data transmission may be influenced as well.

2,Please make the speaker fully charged at first time using to make sure it will work well. (when the speaker's power gets lower, the sound will be not as good as the sound in normal case， Please charge it right now)

3,Please do not expose the speaker into the high temperature environment.

Service and Support:

If your device is not performing as it should, please take it to your local service providers or dealer for service.

FAQ:

1)Why is there no sound even when the speaker is power on?

A: Make sure the battery is being charged up to 4 hours for first time using. The led is lighted when it starts charging.

2)There is no sound ever playing the speaker.

A: Check that the playback device and the Bluetooth speaker whether to establish a good connection, if there is no connection, please reconnect, Also ensure the speaker device is paired and connected with your target phone or other master device.

3)How to identify the speaker has been fully charged

A:When the red charging indicator automatically turns off, which means that the speaker has been fully charged.